

How to install the Minilogger





How to install the Minilogger:




Place the Minilogger close to the communication computer

Connect the cable to the connector
See connection diagram
Also connect the power supply and communication cable

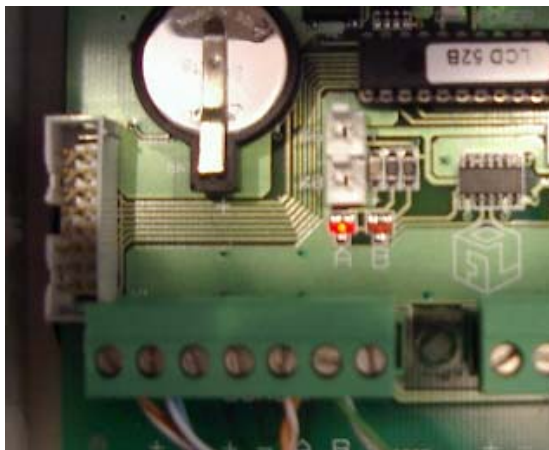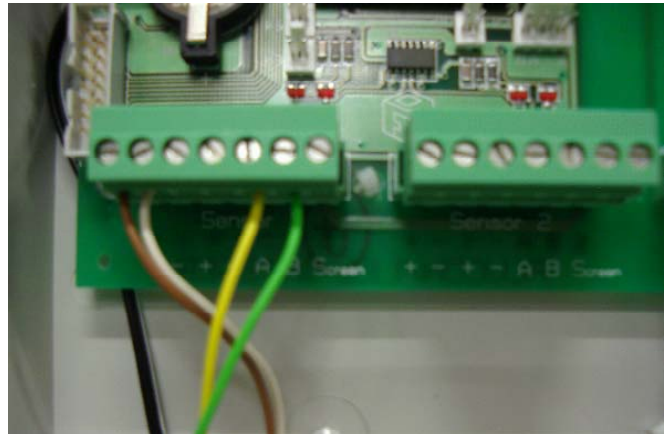


When blocking the receiver closest to the entrance, the red led A on the Minilogger should lit. If the B led is activated, switch the wires A and B.

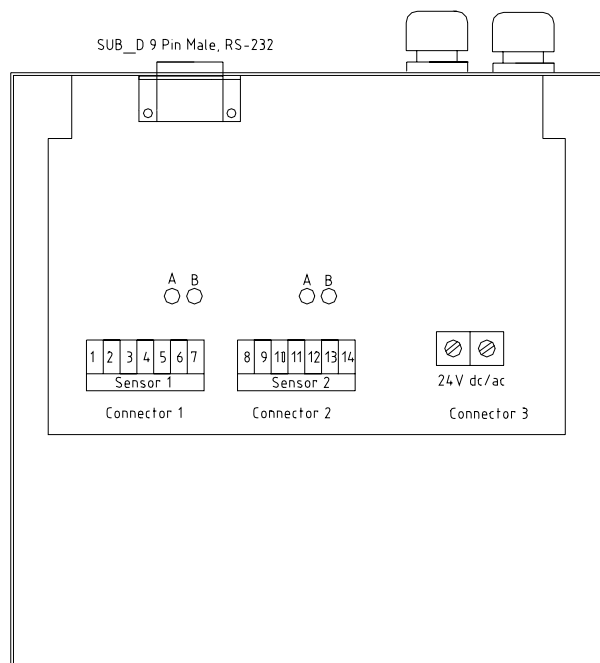

Connector 1 / 2

1	+24V	Transmitter
2	GND	Transmitter
3	+24V	Receiver
4	GND	Receiver
5	Input A *	
6	Input B *	
7	Cable Screen	

× If used in combination with 'BI' directional sensors, make sure that Led A lights before LED B when entering the building

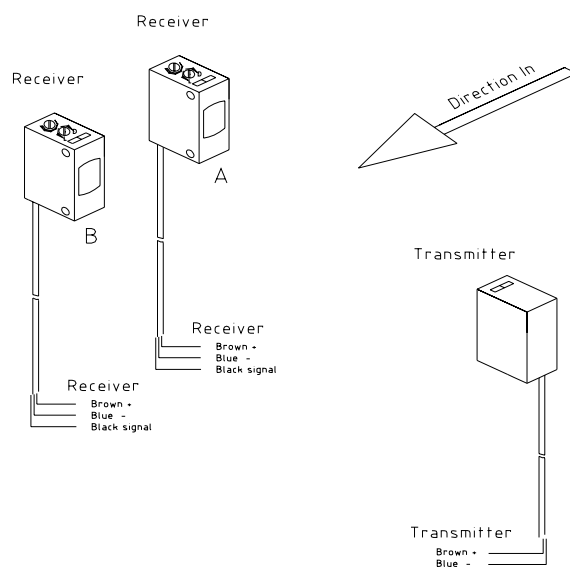

MINI-LOGGER System 6

BLOCK SCHEMATIC

